


MAINTENANCE


Your bow is a mechanical device that is subject to wear and therefore must be inspected periodically and given the proper adjustments and service. It is recommended that this service be performed at least once a year by an authorized Archery Research dealer. All components, including string, cable, axles, e-clips, limbs and riser should be carefully inspected for damage or wear.

USING A BOW PRESS

Never allow your bow to be placed in a center-pull bow press. Always use a double pull press. See illustrations below. Center handle support should be located between the “Anti-Vibration Accessory Mounting Holes” and the end of the riser.

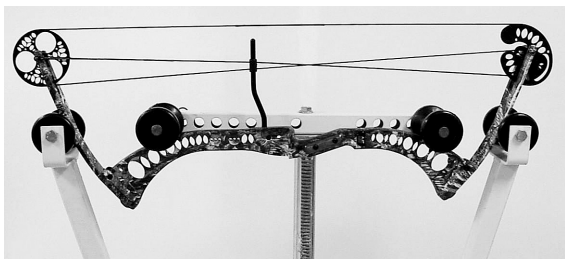

**ALWAYS USE A PRESS THAT
PUTS THE PRESSURE NEAR
THE ENDS OF THE RISER.**

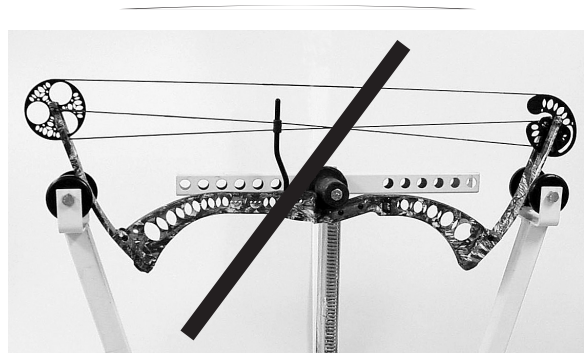

**NEVER USE A PRESS THAT
PUTS PRESSURE ONLY IN THE
CENTER OF THE RISER.**

STRINGS AND CABLES

Apply a light coat of high quality bowstring wax to your string and cable once every two weeks under normal shooting conditions. This will help reduce wear on your string and cable. Use a good quality wax from your Archery Research Dealer. Inspect the string and cable regularly and replace them when there is evidence of wear.